




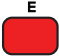 







- 1. **E** : Setting
- 2. **F** : Exit setting
- 3. **G** : Normal mode
- 4. **H** : Channel hopping mode
- 5. **CH+**  : In setting mode, channel up
- 6. **CH -**  : In setting mode, channel down
- 7. **VOL -**  : In setting mode, dwelling seconds descending
- 8. **VOL +**  : In setting mode, dwelling seconds ascending
- 9. **RECALL** : Channel & dwelling seconds confirm
- 10. **CH + ▲** : Channel up
- 11. **CH - ▼** : Channel down
- 12. **Channel key pad** : Channel number (1~7)





A. Channel deletion:

1. Press ③ button  for setting.
2. Press ① button  to do setting.

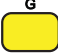 

LED Display	Description
	After enter setting mode, the channel number with red dot on LED are flashing. Now, it is only for the selected channel to do setting.


3. The channel number with red dot on LED are flashing, use ⑤ button  & ⑥ button  to select channel. Turn to the channel number that needs to be skipped/hidden. After selection, press ⑨ button  to confirm.




LED Display	Description
	When you see the number without red dot on LED are flashing, it is only for dwelling-second setting.


4. Then use ⑦ button  & ⑧ button  to do time setting. When you want to delete the channel, just select the setting time in "00" then press ⑨ button  to confirm. ("05" is default time, switch to "00" means this channel is hidden.)
5. If you need to delete other channels, please do next setting.
6. After channels are selected or deleted, press ② button  to finish setting.





B. Channel recovery:

1. Press ③ button  for setting.
2. Press ① button  to do setting.

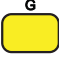 

LED Display	Description
	After enter setting mode, the channel number with red dot on LED are flashing. Now, it is only for the selected channel to do setting.


3. The channel number with red dot on LED are flashing, use ⑤ button  & ⑥ button  to select channel. Turn to the channel number that needs to be recovery. After selection, press ⑨ button  to confirm.




LED Display	Description
	When you see the number without red dot on LED are flashing, it is only for dwelling-second setting.


4. Then use ⑦ button  & ⑧ button  to do time setting. Just change the time setting from "00" to "01" ~ "20" is done. press ⑨ button  to confirm.
5. If you need to delete other channels, please do next setting.
6. After channels are selected or recovery, press ② button  to finish setting.






C. Channel Auto switch:

1. Press ③ button  for setting.
2. Press ① button  to do setting.

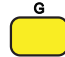 
LED Display	Description
	After enter setting mode, the channel number with red dot on LED are flashing. Now, it is only for the selected channel to do setting.

3. The channel number with red dot on LED are flashing, use ⑤ button  & ⑥ button  to select channel. Turn to the channel number that needs to be recovery. After selection, press ⑨ button  to confirm.

LED Display	Description
	When you see the number without red dot on LED are flashing, it is only for dwelling-second setting.

4. Then use ⑦ button  & ⑧ button  to decide the dwelling seconds for this channel, Just change the time setting from "01" to "20" .
(EX. : In time setting mode, switch time to "06" means this channel will stay 6 seconds then turn to next channel by auto switch.)
press ⑨ button  to confirm.
5. For setting dwelling seconds for other channels, please do the previous setting again. After all channels are confirmed, press ② button  to finish setting.
6. Press ④ button  to execute channel auto switch.

D. Back to normal mode:

1. Just press ③ button  to switch to normal mode.
(Note : Normal mode with channels not deleted.)